



## Tusk UTV Rear Window Instructions Kawasaki Teryx 4

1. Loosely position the Tusk UTV Rear Window up to the outside of the back of the roll cage. Hold it in place by attaching the two top corner straps above the adjoining frame members on the roll cage (see figs. 1 and 2). Leave straps loose at this point.



2. Move down to the next set of straps at the top of the handhold bars. Loop the strap around and under the top of the handhold bar. Thread the strap through the slip-lock buckle (see fig. 3). Leave straps loose for now.




3. Attach the bottom side straps. Loop the straps around the backside of the vertical roll bar, under the bottom of the handhold bar and over to the female buckle (see figs. 4 and 5). Leave straps loose.





4. Remove the rear seat cushions for easy access to route the bottom straps around the seat mounting frame members. Route the passenger side bottom strap down below the outside seatbelt mounting bracket (fig. 6), across the seat frame members, down under the inside seatbelt mounting bracket (fig. 7) and up to the female buckle located in the bottom middle of the rear window (fig. 8). Repeat this process on the driver side.

**(Passenger Rear Seat)**

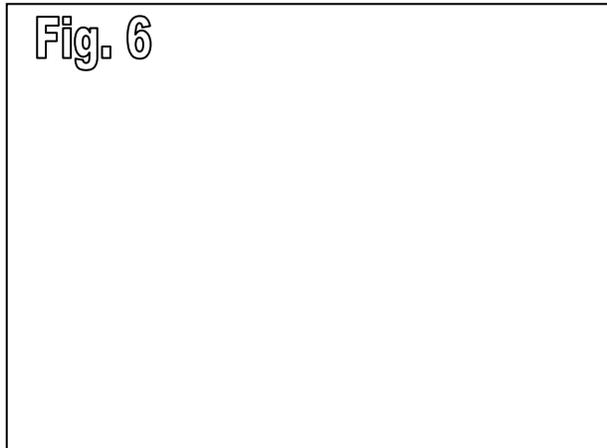

**(Passenger Rear Seat)**

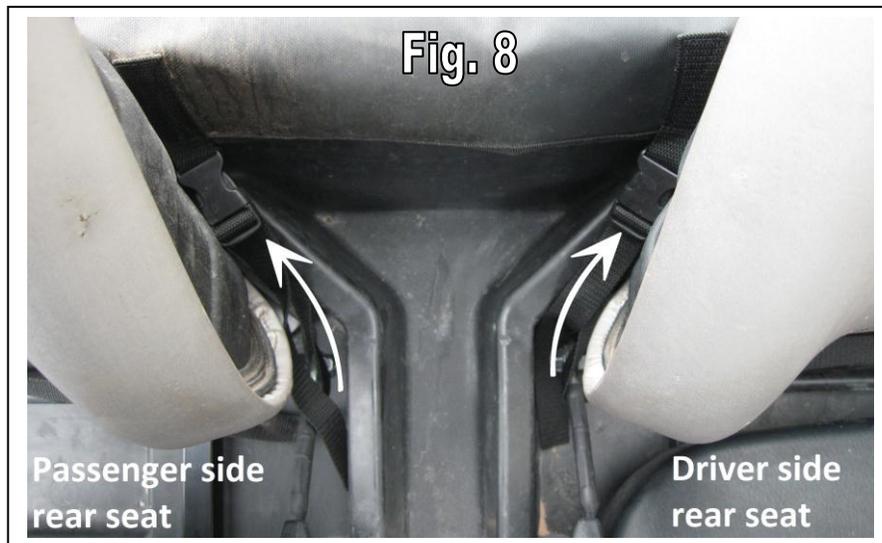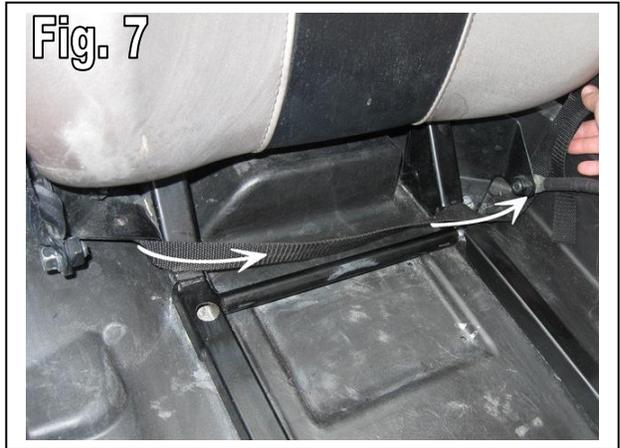

5. When all straps are attached, start at the top corners and begin tightening each strap. Be sure to tighten the straps evenly so the rear window fits symmetrically on the back of the machine.

6. Be sure the installation process is complete and that all straps are tight and secure. You are now ready to ride with the Tusk UTV Rear Window!

***Warning:*** To ensure the longevity of the Tusk UTV Rear Window, it is recommended the rear window is removed during transportation (trailing). The Tusk UTV Rear Window is designed with quick-release hardware for quick and easy removal before transporting the machine.