





A secret ninja secret is to heat the aluminum so it expands and makes installing the frozen shrunken bearing easier. Fire is hot, don't burn yourself.

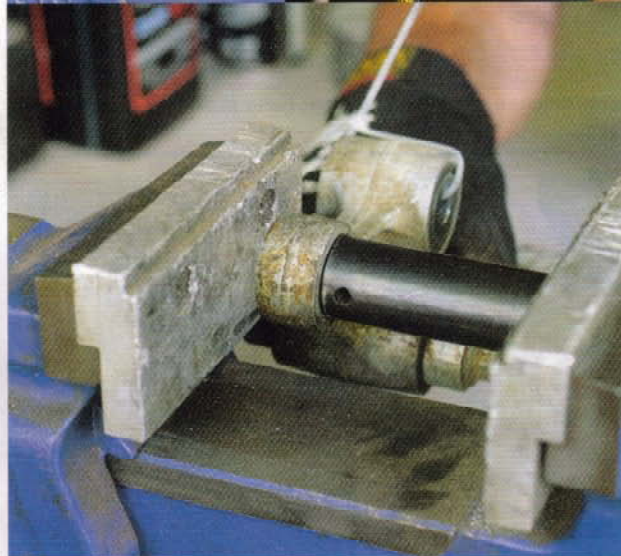

Jay Clark is not a ninja. A vise is a great way to install the bearing. To get it properly centered, a socket of same size works great.

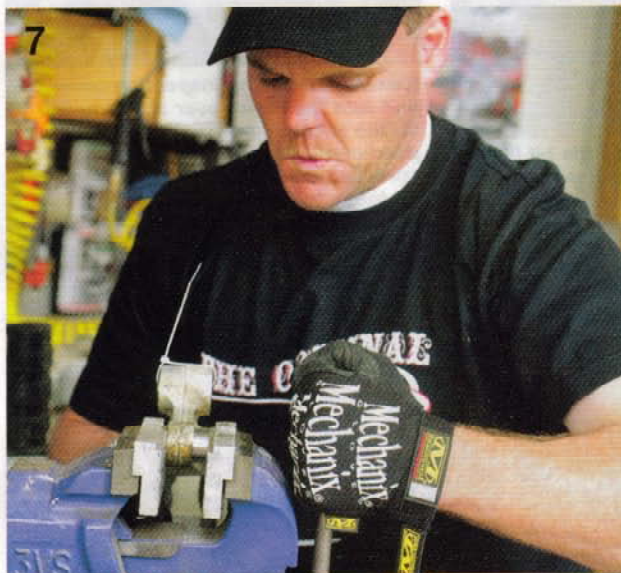

If you want to be super tech, you can use a caliper to measure it to center.



Lots of grease is key.



Take all your new parts and put them in the same way they came out and you're ready to rock. ☐