

# Tusk Top Rack: Suzuki V-Strom 800

Part#1580370028

Thanks for your purchase of the Tusk Top Rack. This rack is made to handle extreme adventure riding, but works great for the commuter as well. Please take note of the information and instructions below to get the most out of your Tusk Top Rack.



**Assembly:** Before you throw any packaging away, make sure you received all the necessary hardware:

Fitment:	
2023+ Suzuki V-Strom 800 (Touring)	
2023+ Suzuki V-Strom 800 DE (Adventure)	

Hardware:	QTY:
Top Rack	1
5/8" Spacer	2
M8x50mm Countersunk	2
Bolt M8x35mm	2
Countersunk Bolt M8	2
Fender Washer	2


M8 Nyloc Nut  
**Rack Installation:**

1. Remove the two OEM 10mm Head Bolts from the original rack. **FIG 1**
2. Set the **(2) 5/8" Spacer** onto the cavity where these bolts were just removed from. **FIG 2**
3. Pass the **(2) M8x50mm Countersunk Bolts** through the front of the **Top Rack**, **5/8" Spacer**, and lightly thread into the bike. Medium strength thread locker is recommended. Leave loose for now. **FIG 3**
4. Pass **(2) M8x35mm Countersunk Bolts** through the **Top Rack**, original Top rack, **M8 Fender Washer**, and lightly secure with **(2) M8 Nyloc Nuts**. **FIG 3, 4**
5. Tighten the front **M8x50mm Countersunk Bolts**. Finally tighten the rear bolts and nut. Do not overtighten the rear bolts.

Enjoy the use of your Tusk Top Rack!



Top Rack

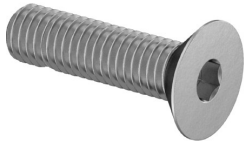

M8x50mm  
Countersunk Bolt



5/8" Spacer



M8x35mm  
Countersunk Bolt



M8 Fender  
Washer



M8 Nyloc  
Nut

