


Tusk Bed Mounted Spare Tire Carrier—Polaris Xpedition

Part Number: 1762940035

Thanks for your purchase of the Tusk Bed Mounted Spare Tire Carrier. This low profile spare tire carrier is perfect for adding piece of mind while maintaining as much bed space as possible. Please follow these instructions to get the most out of your Tusk product.



Vehicle Fitment: Polaris Xpedition ADV

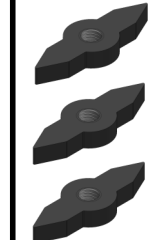

Contents:	QTY:						
Spare Tire Bed Mount	(1)						
Spare Tire Mount	(1)						
M8x16mm Flange Bolt	(4)						
M10x25mm Flange Bolt	(4)						
M10 Locking Flange Nut	(4)						
Rail Nut	(3)						
Jack Package (Optional)	(1)						

Spare Tire Installation:

1. Remove the rear window and anything in the bed or any bed mounted accessories that may get in the way of installation.
2. Drop all of Bed **Rail Nuts** into the rails on your preferred mounting side. Two Rail Nuts on the top and one on the side. *(Fig 1, 2)*
3. Loosely install the **Spare Tire Bed Mount** to the bed rail using the provided **(3)-M8x16mm Flange Bolts** into to **(3)-Bed Rail Nuts**. *(Fig 1, 2)*
4. Loosely install the **Spare Tire Mount** by using the **(4) - M10x25mm Flange Bolts** through the outside of the Spare Tire Mount, then the Bed mount, and a **M10 Locking Flange Nut**. *(Fig 2, 3)*
5. Optional Jack Package: Install the Tusk Jack with the provided mounting bolt through the spare tire carrier as shown in *Fig 3*.
6. Install the spare tire to the Tusk Spare Tire Carrier (We have noticed it is easiest to slide the bottom of the tire up against the side of the bed, then lining up the studs for mounting). Open and close the rear window to check fitment/clearance.
7. Fully tighten all of the bolts on the Spare Tire Carrier. *(Fig 3, 4)*
8. Re-install removed items/window from the bed.

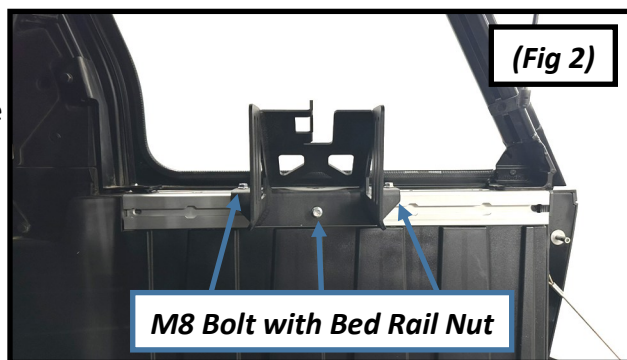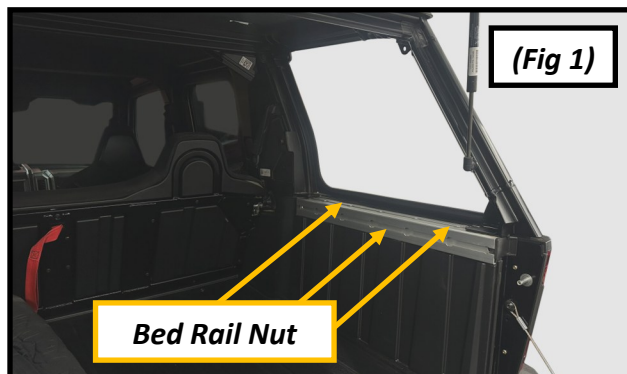

Enjoy your new Tusk Bed Mounted Spare Tire Carrier Panel on your next adventure!