


TUSK CARGO BARRICADE PART NUMBER: 1974620008

Thanks for your purchase of the Tusk Cargo Barricade for your Can-Am Maverick R. Please note the information and instructions below to get the most out of your Tusk Cargo Barricade



**Assembly:** *Before you throw any packaging away, make sure you received all of the necessary hardware.*

Vehicle Fitment:	
Can-Am Maverick R	2024
Hardware:	QTY:
Cargo Barricade	1
1/4" Spacer	2
5/8" Spacer	2
13/16" Spacer	2
30mm Screw	2
M6x40mm Button Head Bolt	4
M6 Washer	6
Foam Tape	24"

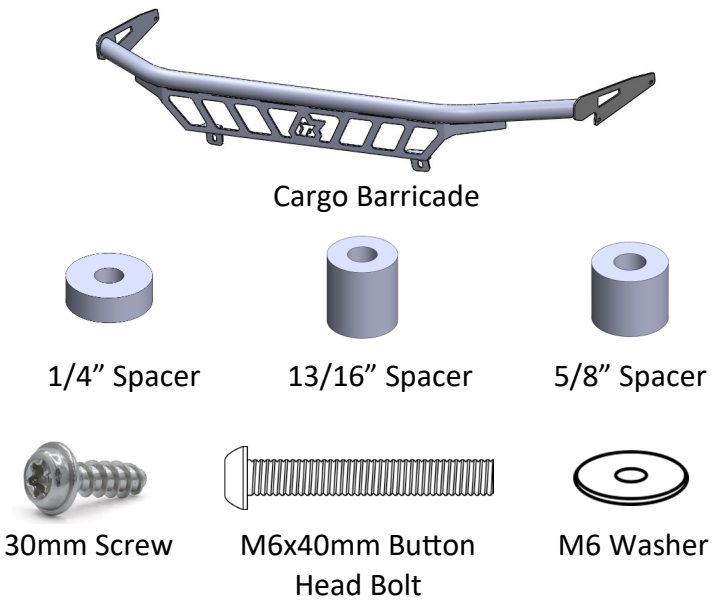

**Installation Instructions:**

1. Begin installation by sticking the **24" Foam Tape** to the bottom of the **Cargo Barricade** as shown in **FIG 1**.
2. Remove both the torx bolts above the cargo cubby and the two torx screws in the back **FIG 2**.
3. Set the **Cargo Barricade** onto the rear of the machine. Place a **1/4" Spacer** between the barricade and where the rear screws were removed from. Use **(2) 30mm Screws** with **(2) M6 Washers** to screw the barricade to the machine. These screws go into the machine's plastic threads. Do NOT overtighten.
4. Set the **13/16" Spacer** behind the barricades rear bolt. Use an **M6x40mm Button Head Bolt** with **M6 Washer** to bolt this to the machine. Repeat for the other side.
5. Set the **5/8" Spacer** behind the barricades front bolt. Use an **M6x40mm Button Head Bolt** with **M6 Washer** to bolt this to the machine. Repeat for the other side.

Enjoy the use of your Tusk Cargo Barricade!

