

TUSK BEDSIDE MOLLE DOOR PART NUMBER: 2148600001



TUSK

Thanks for your purchase of the Tusk Bedside Molle Door. Please take note of the information and instructions below to get the most out of your Tusk product.

Assembly: Before you throw any packaging away, make sure you received all of the necessary hardware

Vehicle Fitment:

Can-Am Maverick R

Hardware:

QTY:

Molle Door	LH/RH
Quick Release Pin	2
Quick Release Bolt	2
Plastic Spacer	2
41" Foam Tape	2
M6 Nyloc Nut	2



LH/RH Molle Door



Foam Tape



Quick Release Bolt



Quick Release Pin



M6 Nyloc Nut



Plastic Spacer

Installation Instructions:

1. Begin installation by drilling the second hole down at the rear end of the cargo cubby with a 1/4" drill bit. **FIG 1** Repeat for the other side.
2. Pass the **Quick Release Bolt** through the **Plastic Spacer**, the hole drilled in the bedside, and secure with an **M6 Nyloc Nut**. Tighten the nut using a **Quick Release Pin** to stop the quick release bolt from spinning. **FIG 2** Repeat for the other side.
3. Set the **Molle Doors** on a soft surface front side. Apply the **41" Foam Tape** to the perimeter of the door that contacts the bed. **FIG 3**.
4. The molle doors can now be installed to the bed and secured using the Quick Release Pin.

Enjoy the use of your new Tusk Bedside Molle Door!



FIG 1



FIG 2



FIG 3

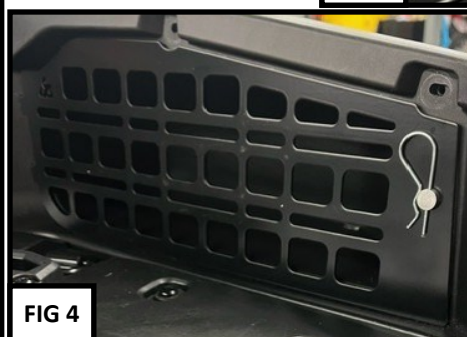


FIG 4



FIG 5

INSTALLATION INSTRUCTIONS AND INFORMATION