

HOW TO INSTALL AN HOUR METER

STEP 1. It is possible to install an hour meter without removing the gas tank, but it is best to remove the tank to access the spark plug wires.

STEP 2. Take the supplied hour meter wire and wrap it around the spark plug wire at least three times. Leave about four inches of extra wire so that when the spark plug wire is wrapped, you can zip-tie the two pieces of wire together.

STEP 3. If you have a direct-coil ignition (where the coil is mounted in the spark plug cap), you must wrap the hour meter wire around the plastic coil (not the spark plug wire leading to it).

STEP 4. Route the rest of the hour meter wire under the gas tank (next to the throttle cables) to keep it out of the way.

STEP 5. Put the gas tank back on. With the tank on, you can choose the perfect spot to mount the hour meter. Most riders put it on the right side head tube gusset.


STEP 6. Once you know where you are going to mount the hour meter, insert the wire into the channel on the back of the hour meter. It is important that you get the wire deep into the channel. Use a small flat-bladed screwdriver to press it into the slot. Once it is firmly in place, a small icon on the left side of the hour meter screen will flash five or six times.

STEP 7. With the location chosen, cut any excess wire off with diagonal cutters. Many riders coil up the excess wire under the gas tank and zip-tie it to the frame so that they will have extra wire should they decide to move the hour meter to a different location or bike.

STEP 8. Although it is possible to drill and tap holes in the head tube gusset to mount the hour meter, it is best to use double-sided tape (supplied) to hold the hour meter in place. Clean the frame and stick the tape to the hour meter and the hour meter to the frame.

STEP 9. DR.D and Napalm make special under-\$20 hour meter back-


STEP 2.

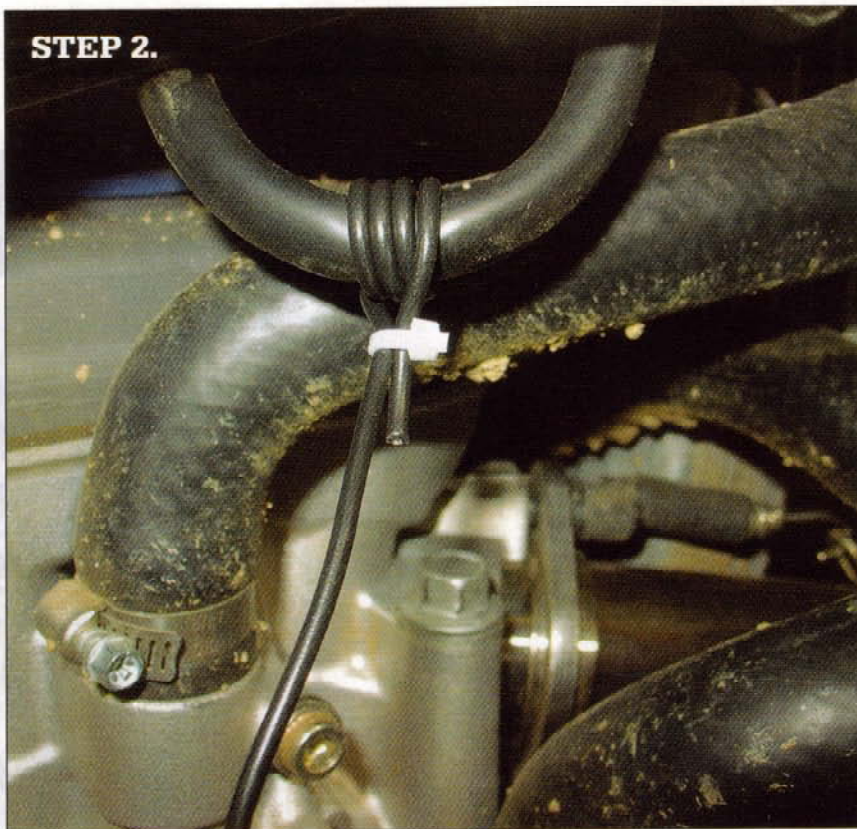


ets that allow you to mount the hour meter to the bolt in front of the gas tank (this way that hour meter is

visible at all times). Contact DR.D at (951) 808-1114 or Napalm at (509) 991-9759. □


STEP 3.

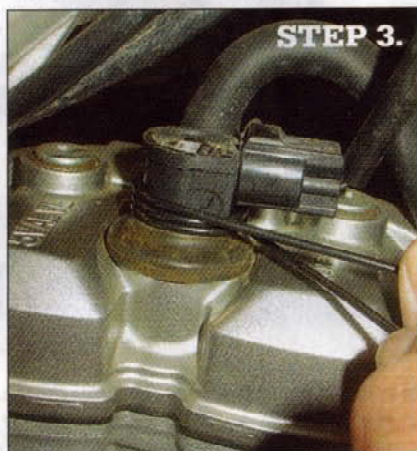

STEP 6.

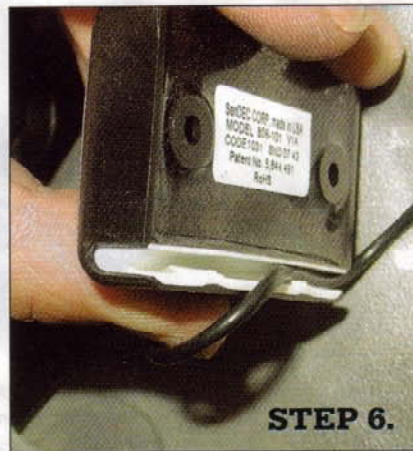

STEP 8.

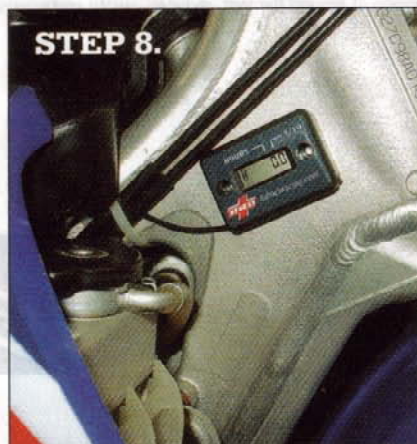

STEP 9.

